


IGNITION OR STARTER SWITCH ASSY REPLACEMENT


8002U-01

1. REMOVE STEERING COLUMN COVER (See page 50-8)

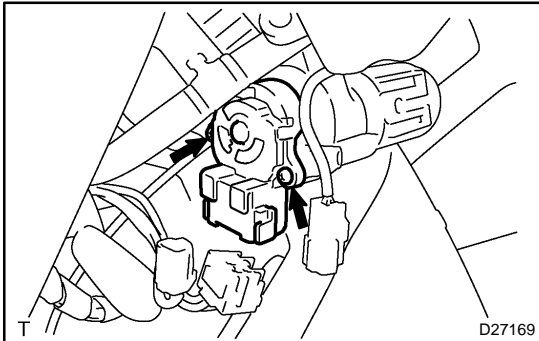

- ## 2. REMOVE IGNITION OR STARTER SWITCH ASSY
- (a) Disconnect the ignition switch connector and unlock warning switch connector.
 - (b) Remove the 2 clamps.
 - (c) Remove the 2 screws and ignition switch.

INSPECTION

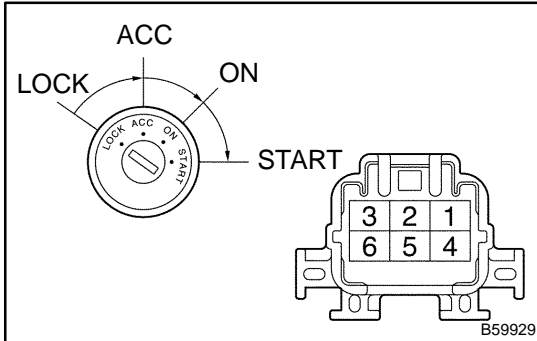

1. INSPECT IGNITION OR STARTER SWITCH ASSY

(a) Inspect the ignition switch.

Standard:

Switch position	Terminal No.	Specified condition
LOCK	-	No continuity
ACC	1 ↔ 3	Continuity
ON	1 ↔ 2 ↔ 3 5 ↔ 6	Continuity
START	1 ↔ 2 4 ↔ 5 ↔ 6	Continuity

If the continuity is not as specified, replace the switch.